


Photometrics® Quick Installation Guide for IEEE-1394

Software Installation


Install the Camera-Interface Software (PVCAM®)

1. Install the IEEE-1394 FireWire card into your computer.
2. Power on your computer and insert the Photometrics flash drive into a USB port. You must log on with Administrator rights.
3. Install PVCAM.
4. Begin the automated software installation sequence.
5. Restart your computer and complete the automated software installation sequence.
6. Connect the camera to the PC.


Evolve® 512 Delta, Evolve® 512, Evolve® 128

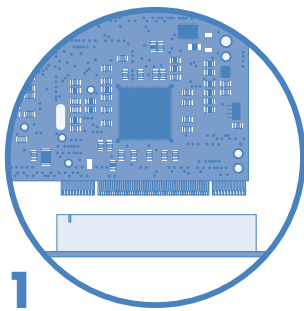


1
Install the IEEE-1394 card in your computer (see computer manufacturer's instructions).

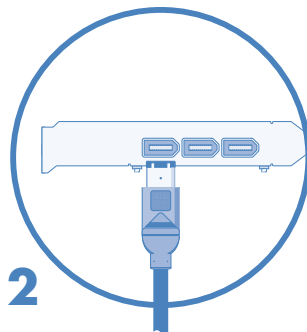


2
Connect the data cable to the IEEE-1394 card connector. Be sure to connect the cable in the proper orientation.

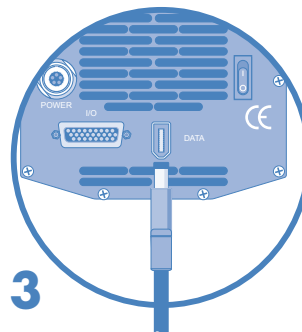


3
Connect the data cable to the DATA connector on the camera head. Be sure to connect the cable in the proper orientation.

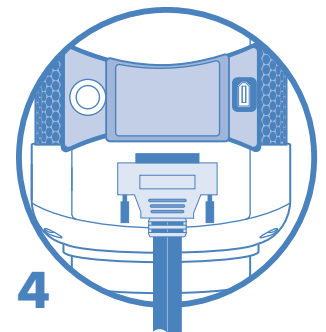

4
Connect the power supply to the camera head's POWER connector. Secure the power supply by tightening the side screws to the camera head.

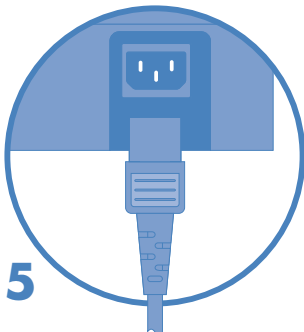

5
Connect the power cord to the power supply. Plug the power cord into a wall outlet.

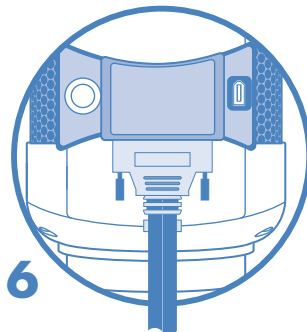

6
Power on your computer. Then power on the camera by pushing in the POWER switch on the camera.

More detailed installation instructions can be found in the camera manuals on the Photometrics flash drive.

Contact Photometrics Customer Service for additional information:

+1 800.874.9789

www.photometrics.com



Photometrics is a registered trademark.
Evolve and PVCAM are registered trademarks of Photometrics.

58-519-007 Rev A05